

Kanal nr	Frekvens	Kanalnavn
0	674MHz	Disp
0	690MHz	Disp
0	698MHz	Disp
0	858MHz	Disp
0	858MHz	Disp
1	530MHz	DR1
2	522MHz	TV 2
3	562MHz	TV3
4	674MHz	Kanal 4
5	546MHz	Kanal 5 - 20
6	794MHz	6'eren
7	690MHz	TV3 Puls
8	690MHz	TV3+
9	794MHz	Canal 9
10	530MHz	DR2
11	530MHz	DR3
12	530MHz	DR K
13	698MHz	TV2 Charlie
14	682MHz	TV2 Zulu
15	698MHz	TV2 News
16	538MHz	Folketinget
17	858MHz	CNN
18	826MHz	BBC World News
19	506MHz	France 24 Engelsk
20	802MHz	TV3 Sport 1
21	810MHz	Eurosport
22	810MHz	Eurosport 2
24	706MHz	TV3 Max - 20
25	818MHz	TV2 Sport
28	786MHz	Viasat Ultra HD - 20
31	826MHz	Animal Planet
32	826MHz	Discovery
33	818MHz	TLC
34	834MHz	Discovery Science
35	834MHz	Motorvision TV
36	842MHz	Discovery ID
40	842MHz	National Geographic
46	858MHz	BBC Brit

Kanal nr	Frekvens	Kanalnavn
47	562MHz	dk4 - 20
48	682MHz	TV2 Fri
50	834MHz	Cartoon Network
51	538MHz	DR Ramasjang
52	538MHz	DR Ultra
53	794MHz	Disney Channel
54	834MHz	Disney XD
55	802MHz	Disney Junior
56	546MHz	Nickelodeon - 20
57	842MHz	Nick jr.
58	810MHz	Boomerang
59	674MHz	Paramount Networks
60	858MHz	MTV Danmark
61	818MHz	VH1
65	314MHz	C More First HD
66	314MHz	C More Hits HD
67	314MHz	C More Series HD
68	314MHz	C More Stars HD
70	322MHz	Viasat Film Premiere
71	322MHz	Viasat Film Series
72	322MHz	Viasat Film Family
73	322MHz	Viasat Film Hits
74	322MHz	Viasat Film Action
80	514MHz	SVT1
81	514MHz	SVT2
82	498MHz	TV4
83	498MHz	RTL
84	514MHz	NRK1
85	506MHz	NRK2
86	562MHz	NRK3
87	506MHz	ZDF
88	522MHz	ARD - Das Erste
89	498MHz	TV 2 Norge
91	538MHz	DR1 Syn
92	538MHz	DR2 Syn
93	538MHz	DR3 Syn
94	522MHz	Kanal Hovedstaden
95	450MHz	Lorry

Kanal nr	Frekvens	Kanalnavn
99	450MHz	Infokanal
101	250MHz	Al Jazeera English
102	242MHz	Al Jazeera Channel
103	266MHz	Al Arabia
105	266MHz	Dubai Sports 3
106	250MHz	ESC
107	250MHz	Al Aoula Inter
108	266MHz	IQRAA
109	250MHz	Dubai TV
110	242MHz	2M Monde
111	250MHz	AD Aloula
112	266MHz	France 24 (in Arabic)
150	234MHz	RTK-1
152	234MHz	RTV Montenegro
153	226MHz	DM-SAT
154	234MHz	HRT-TV1
155	226MHz	Pink Plus
156	226MHz	Pink Extra
157	226MHz	Pink 3 / Kids
158	226MHz	Pink Film
159	226MHz	Pink Music
160	242MHz	Rai 1
161	242MHz	Rai 2
164	234MHz	TVE Int.
166	266MHz	France 24 (en Français)
167	234MHz	TV5 Monde
168	242MHz	RTPi
169	234MHz	TV Record SD
170	242MHz	TELESUR
190	250MHz	TVP Polonia
192	266MHz	TVS
201	242MHz	TRT TURK
202	258MHz	atv avrupa
203	258MHz	KANAL 7 AVRUPA
204	258MHz	EURO D
205	258MHz	SHOW TURK
206	258MHz	EUROSTAR
207	266MHz	360

Kanal nr	Frekvens	Kanalnavn
220	226MHz	Disp
221	226MHz	Disp
222	234MHz	Disp
223	234MHz	Disp
230	250MHz	Thai Global Network
301	434MHz	DR1
302	426MHz	TV 2
303	346MHz	TV3
304	362MHz	Kanal 4
305	362MHz	Kanal 5
306	330MHz	6'eren
307	386MHz	TV3 Puls
308	346MHz	TV3+
309	330MHz	Canal 9
310	434MHz	DR2
311	434MHz	DR3
312	434MHz	DR K
313	362MHz	TV2 Charlie
314	338MHz	TV 2 Zulu
315	338MHz	TV 2 News
319	410MHz	France 24 Engelsk
320	298MHz	TV3 Sport 1
321	298MHz	Eurosport
322	282MHz	Eurosport 2
324	298MHz	TV3 Max
325	338MHz	TV 2 Sport
327	346MHz	Viasat Golf
331	282MHz	Animal Planet
332	290MHz	Discovery
333	290MHz	TLC Danmark
334	386MHz	Discovery Science
335	386MHz	Motorvision TV
336	274MHz	Discovery ID
340	282MHz	National Geographic
341	290MHz	National Geographic Wild
342	306MHz	Trace Urban
343	370MHz	The History Channel HD
344	330MHz	H2

Kanal nr	Frekvens	Kanalnavn
345	306MHz	BBC Earth
346	306MHz	BBC BRIT
347	274MHz	dk4
348	370MHz	TV 2 Fri
349	394MHz	Sky NEWS
350	394MHz	Cartoon Network
353	394MHz	Disney Channel
354	394MHz	Disney XD
355	394MHz	Disney Junior
356	394MHz	Nickelodeon
357	394MHz	Nick jr.
362	386MHz	VH1 Classic
385	410MHz	NRK2
387	410MHz	ZDF
388	426MHz	ARD - Das Erste
394	426MHz	Kanal Hovedstaden
395	426MHz	Lorry
424	802MHz	Disp
441	450MHz	Parknet Service 1
501	450MHz	DR P1
502	450MHz	DR P2
503	450MHz	DR P3
504	450MHz	DR P4
505	450MHz	DR P5
506	450MHz	DR P6 Beat
507	450MHz	DR P7 Mix
508	450MHz	DR P8 Jazz
520	450MHz	Nova FM
521	450MHz	The Voice
522	450MHz	Radio 24Syv
523	450MHz	Radio 100
524	450MHz	POP FM
525	450MHz	My Rock
526	450MHz	Radio Soft
527	450MHz	Radio Klassisk